

OPENBOX_How_to_Upgrade_TpList_By_USB

- 1).Download the "TP list" file to the U disk,U disk connected to TV BOX.
- 2).Go to"Menu-tools-Upgrade By USB"



 
- 3).In the submenu of "Upgrade Mode",please press "<"or">" on theremote controller to enable the "Misc Files".

 


- 4).Go to "Select & Upgrade" then the OK button.



5).Select "TP_PROG.ABS(Sat,TP,Prog),*press yellow key on the remote.then reset TV BOX.

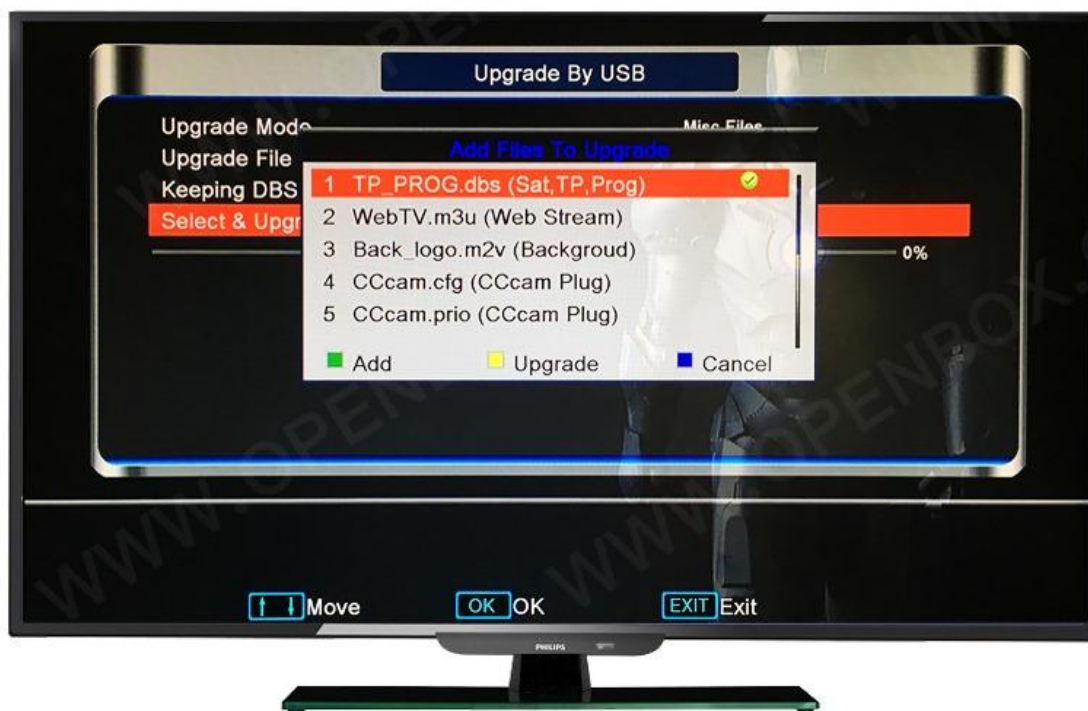

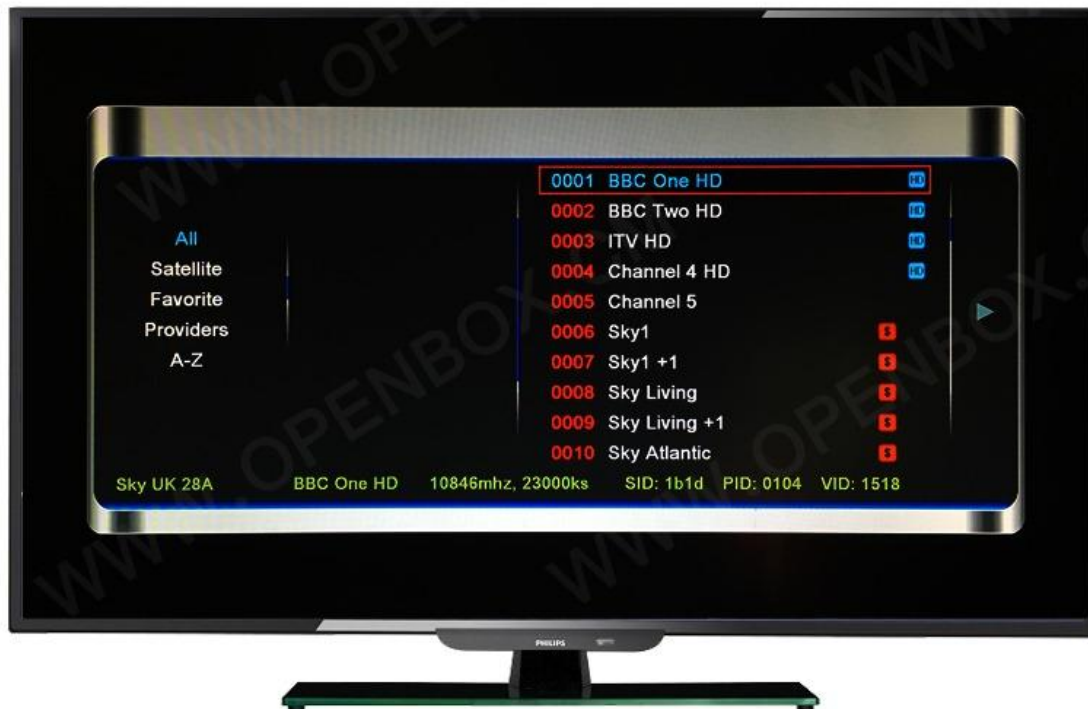

0001	BBC One HD	HD
0002	BBC Two HD	HD
0003	ITV HD	HD
0004	Channel 4 HD	HD
0005	Channel 5	
0006	Sky1	S
0007	Sky1 +1	S
0008	Sky Living	S
0009	Sky Living +1	S
0010	Sky Atlantic	S

Sky UK 28A BBC One HD 10846mhz, 23000ks SID: 1b1d PID: 0104 VID: 1518